



Canon Powershot S110 Option Dial Replacement

The option dial is on the top of the camera next to the power button. This guide will explain how to replace a defective dial.

Written By: akac92



INTRODUCTION

In this guide, the process of partially breaking down the Canon Powershot S110 and replacing the option dial will be explained in detail.

Step 1 — Option Dial



- Remove the battery by sliding open the battery cover on the bottom of the camera. The battery must be removed to avoid shorting out any part of the camera.

Step 2





- Remove the six screws using a small Phillips head screwdriver.
- Remove the 2 screws on the side of the camera on either side of the HDMI input panel.
- Remove the 2 screws on the opposite side of the camera.
- Remove the 2 screws on the bottom of the camera on either side of the tripod mounting hole.

Step 3




- Using an opening tool, pry open the cover of the camera around each edge. Once all of the clips around the plastic cover are released, the cover will lift off.

Step 4

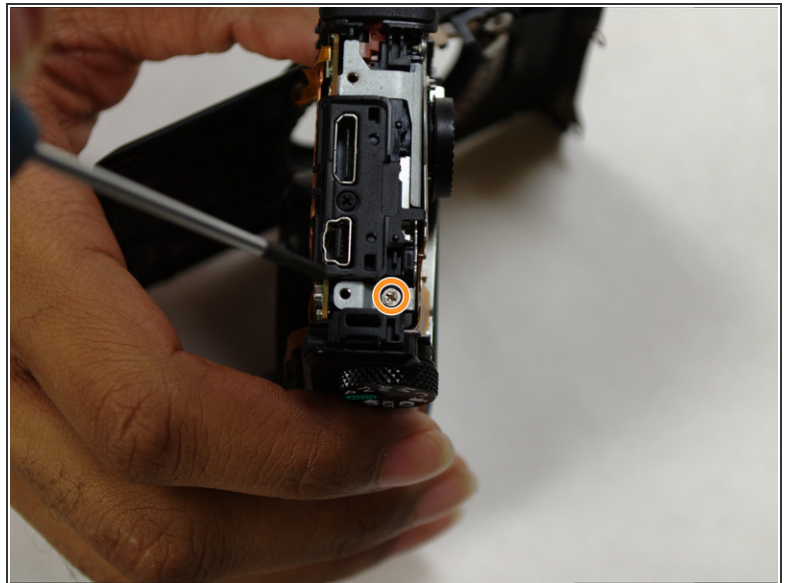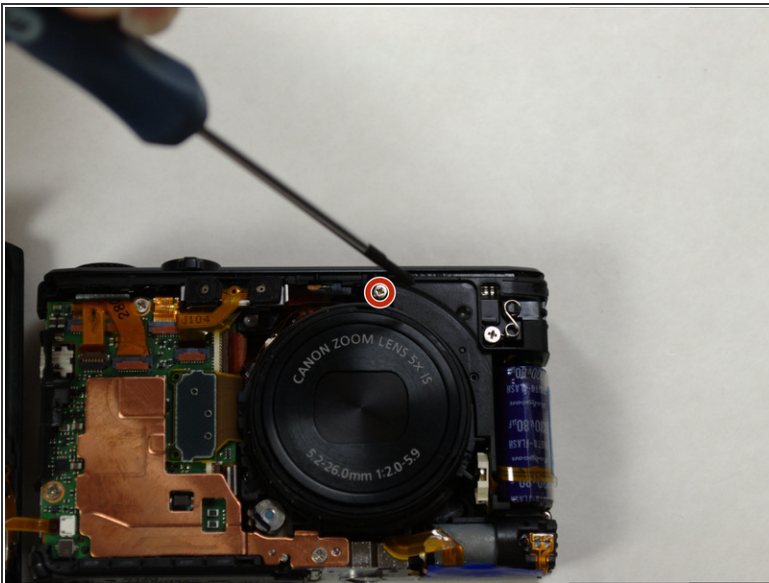


- Remove the two screws holding the the top plastic bracket in place using a Phillips head screwdriver.
- Remove the screw holding down the lens cover.
- Remove the screw located near the option dial next to the USB connections.

Step 5

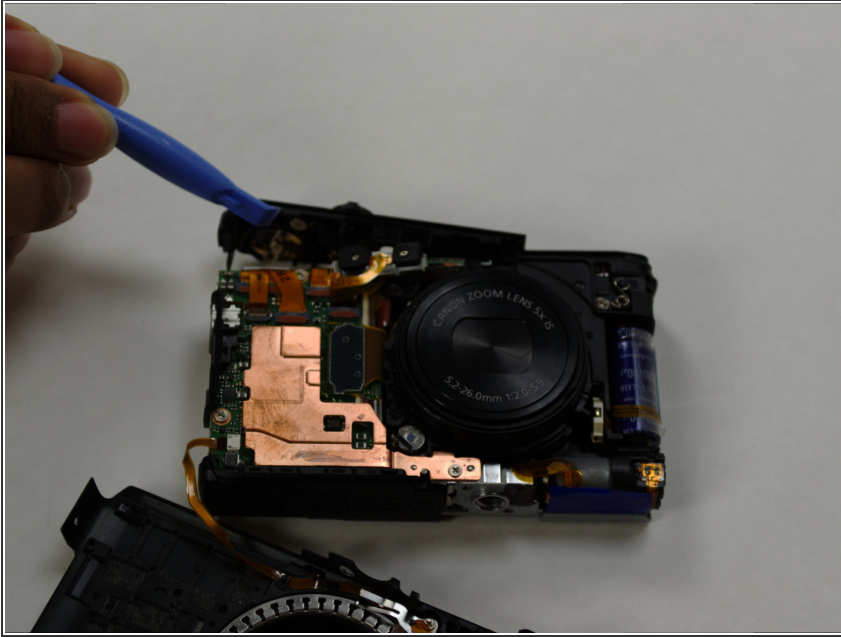



- Carefully lift the top panel off the camera using a prying tool.

Step 6

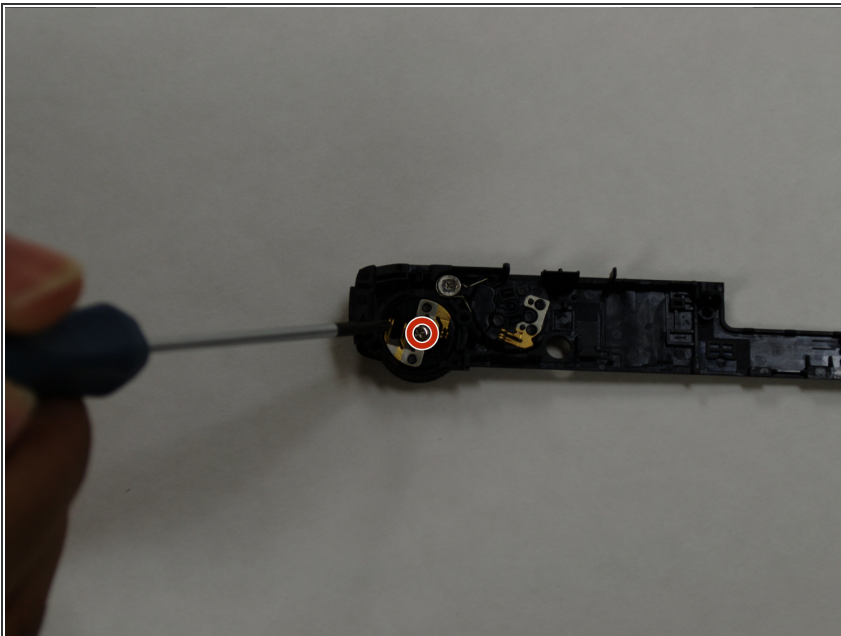

- Remove the screw at the center of the rear of the option dial using a Phillips head screwdriver.

Step 7

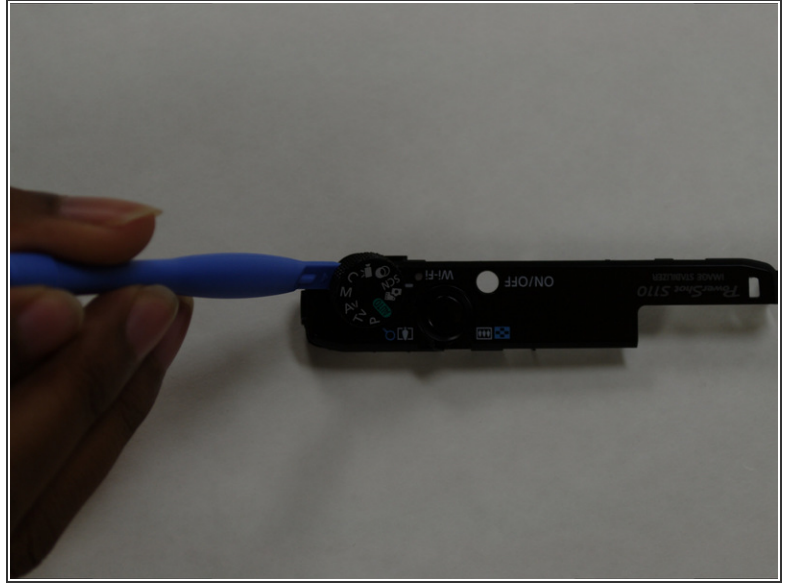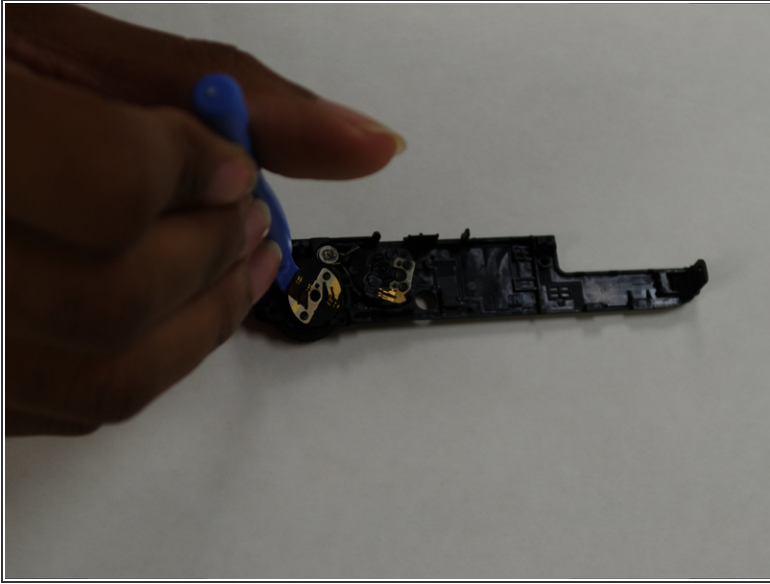

- Remove the underlying component that was attached to the now-removed screw using a prying tool.
- Afterwards, remove the dial on the opposite side using the prying tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 06:07:15 PM.